

## FRONT CONSOLE BOX (w/ Refrigerated Cool Box) > REMOVAL

for Preparation [Click here](#)

### 1. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

- a. Start the engine.
- b. Operate the cooler compressor under the conditions shown below:

Item	Condition
Engine Speed	Idling
Operating Time	3 minutes or more
A/C Switch Status	On
Blower Switch Status	HI
Set Temperature	MAX COOL

This causes most of the compressor oil from the various components of the A/C system to collect in the A/C compressor.

**NOTICE:**

It is not necessary to operate the cooler compressor if the A/C does not operate because of compressor lock, etc.

- c. Stop the engine.
- d. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

**HINT:**


Use the refrigerant recovery unit in accordance with the manufacturer's instruction manual.

### 2. REMOVE FRONT SEAT ASSEMBLY

- a. for Manual Seat:  
Remove the front seat assembly ([Click here](#)).
- b. for Power Seat:  
Remove the front seat assembly ([Click here](#)).
- c. for Walk in Seat Type:  
Remove the front seat assembly ([Click here](#)).

### 3. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY

- a. Detach the 4 clips.
- b. Disconnect the connector and remove the integration control and panel assembly.

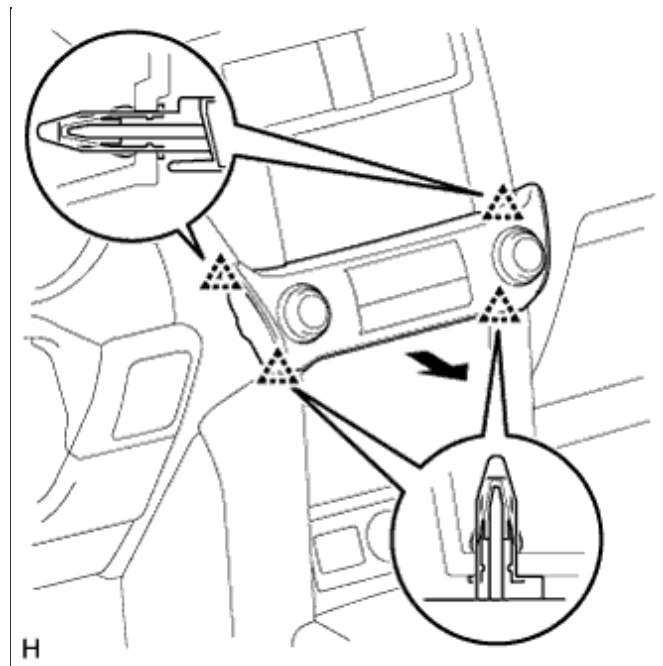


#### 4. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

- a. Put protective tape around the No. 2 instrument panel finish panel cushion.

##### Text in Illustration

*1	Protective Tape
----	-----------------

- b. Using a moulding remover, detach the 5 clips and remove the No. 2 instrument panel finish panel cushion.

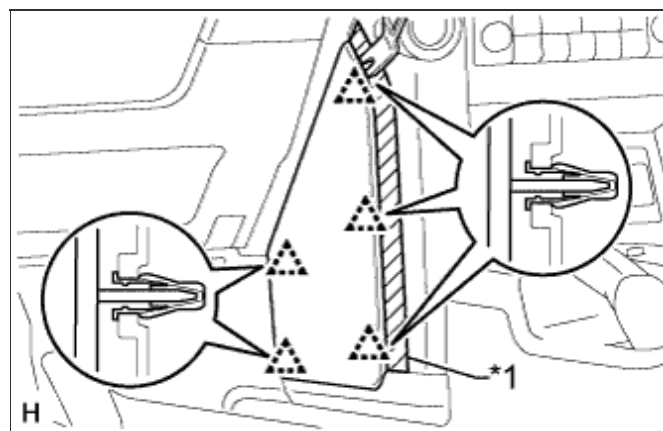


#### 5. REMOVE NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

##### HINT:

Use the same procedure described for the No. 2 instrument panel finish panel cushion.

#### 6. REMOVE INSTRUMENT PANEL FINISH PANEL END LH

- a. Detach the 4 clips and remove the instrument panel finish panel end.

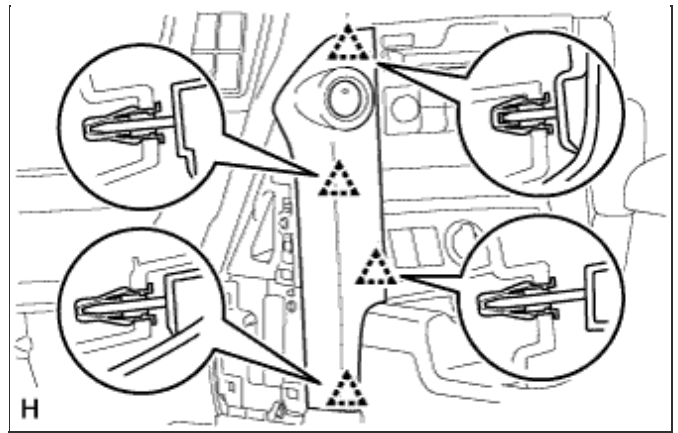

## 7. REMOVE INSTRUMENT PANEL FINISH PANEL END RH

### HINT:

Use the same procedure described for the No. 2 instrument panel finish panel cushion.


## 8. REMOVE FRONT CONSOLE UPPER PANEL GARNISH

- a. Put protective tape around the front console upper panel garnish.

### Text in Illustration


*1	Protective Tape
----	-----------------

- b. Detach the 5 clips.
- c. Disconnect each connector and remove the front console upper panel garnish.

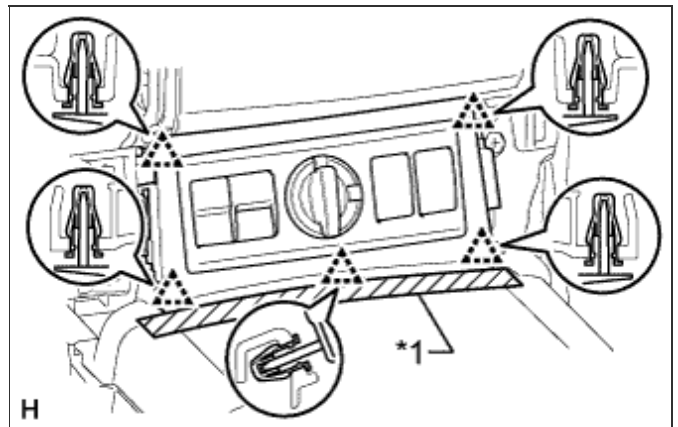


## 9. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

- a. for LHD:
- i. Remove the screw.
  - ii. Detach the 2 clips and 2 guides and remove the No. 1 instrument panel under cover.

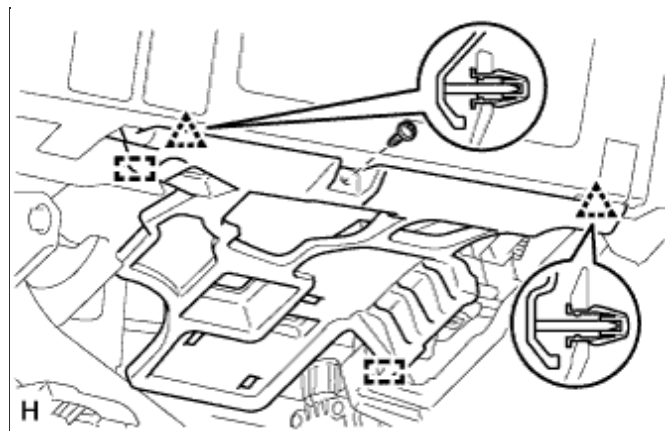


**b.** for RHD:

- i.** Remove the screw.
- ii.** Detach the 3 clips and 2 guides and remove the No. 1 instrument panel under cover.

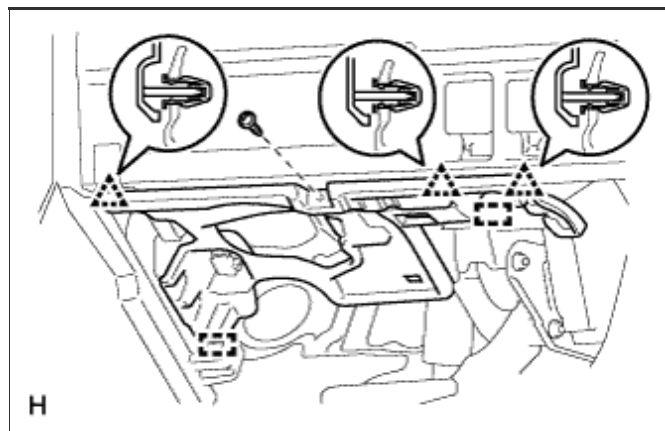


## 10. REMOVE FRONT NO. 1 CONSOLE BOX INSERT

- a.** Detach the 2 clips and guide and remove the front No. 1 console box insert.

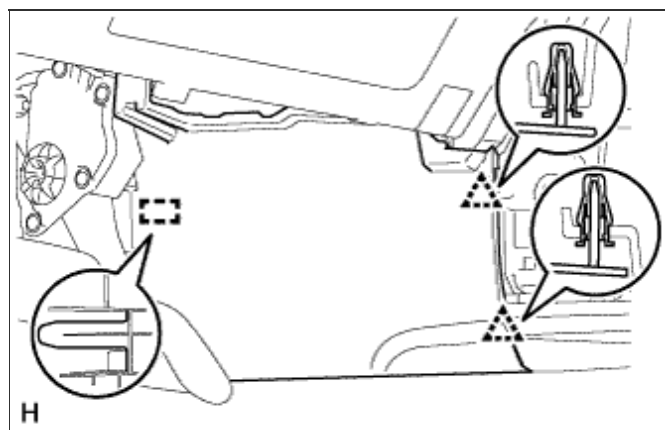

## 11. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

- a.** Remove the screw.
- b.** Detach the 3 clips and 2 guides and remove the No. 2 instrument panel under cover.

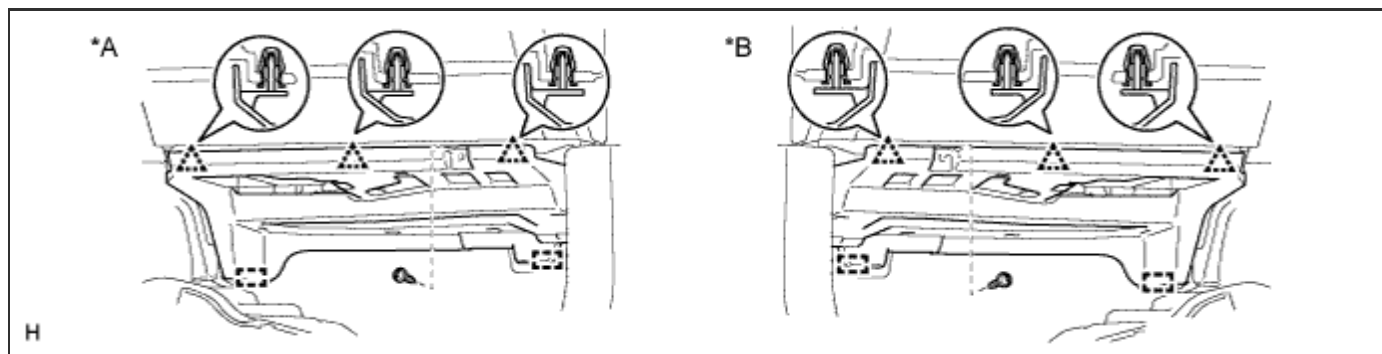


### Text in Illustration

*A	for LHD	*B	for RHD
----	---------	----	---------

## 12. REMOVE FRONT NO. 2 CONSOLE BOX INSERT

- a. Detach the 2 clips and guide and remove the front No. 2 console box insert.

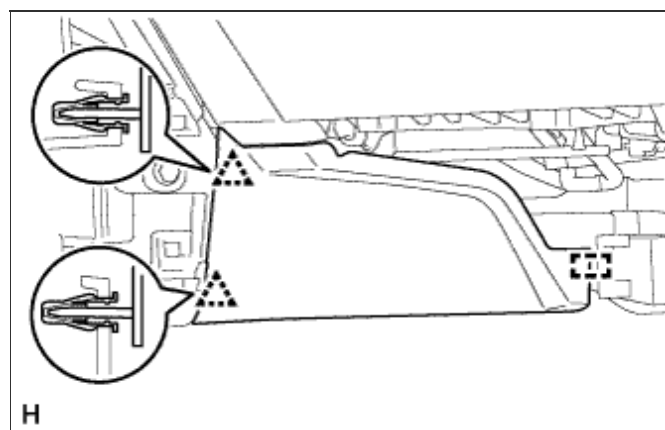

## 13. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


- a. for Automatic Transmission:  
Remove the shift lever knob sub-assembly ([Click here](#)).
- b. for Manual Transmission:  
Remove the shift lever knob sub-assembly ([Click here](#)).

## 14. REMOVE CONSOLE PANEL SUB-ASSEMBLY

- a. for Automatic Transmission:  
Remove the console panel sub-assembly ([Click here](#)).
- b. for Manual Transmission:  
Remove the console panel sub-assembly ([Click here](#)).

### 15. REMOVE NO. 1 CONSOLE BOX DUCT (for Single Air Conditioning System)

- a. Remove the clip and No. 1 console box duct.

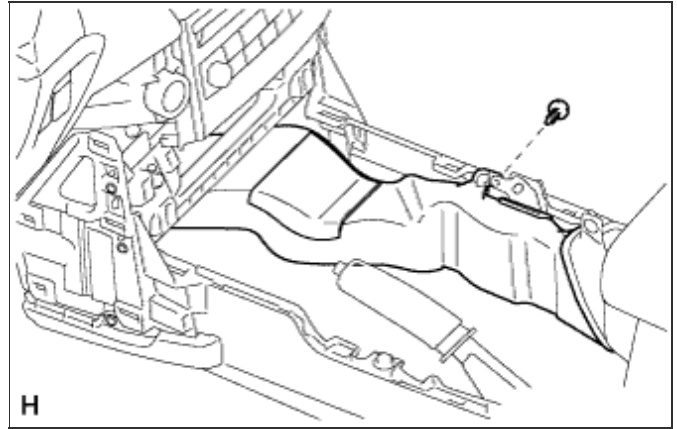


### 16. REMOVE COOLING BOX TRAY

- a. Remove the cooling box tray.

### 17. REMOVE REAR CONSOLE END PANEL SUB-ASSEMBLY

- a. Detach the 8 claws.
- b. Disconnect the connector and remove the rear console end panel sub-assembly.

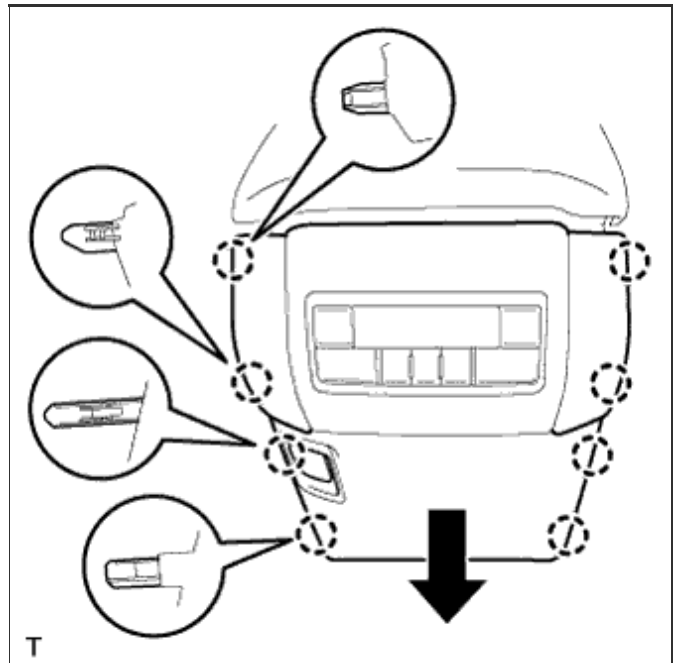


### 18. REMOVE CENTER FLOOR CARPET COVER RH

- a. Detach the 3 claws and remove the center floor


carpet cover RH.

**Text in Illustration**

*1	Fastener
----	----------

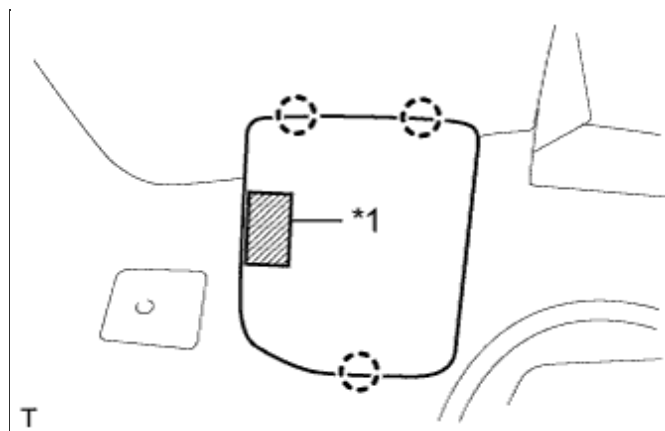

**19. REMOVE CONSOLE BOX ASSEMBLY**

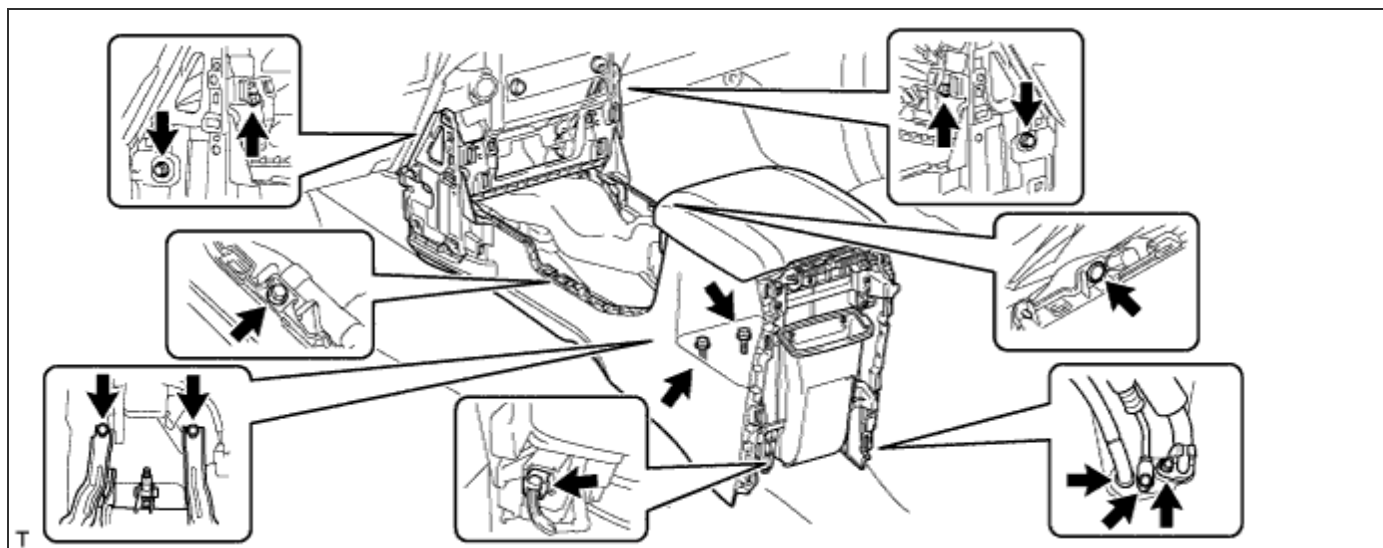

- a. Remove the clip.
- b. Remove the 7 bolts and 2 screws.
- c. Remove the 2 bolts and disconnect the 2 cooler pipes.
- d. Disconnect the drain cooler hose.
- e. Disconnect the connector and remove the console box assembly.

