

## VALVE CLEARANCE > ON-VEHICLE INSPECTION

### VALVE CLEARANCE > ON-VEHICLE INSPECTION

for Preparation [Click here](#)

#### 1. CHECK VALVE CLEARANCE

##### 1. CHECK VALVE CLEARANCE

a. Check for noise and vibration.

- i. Check for valve noise or rough idle.
- ii. Judge whether the valve clearance needs to be adjusted. If the valve noise is too loud or the idle is rough, inspect the valve clearance ([Click here](#)).



