

BACK DOOR GLASS (w/ Back Door Tire Carrier) > REMOVAL


BACK DOOR GLASS (w/ Back Door Tire Carrier) > REMOVAL

for Preparation [Click here](#)

1. REMOVE BACK DOOR CENTER GARNISH
2. REMOVE BACK DOOR SIDE GARNISH LH
3. REMOVE BACK DOOR SIDE GARNISH RH
4. REMOVE BACK DOOR TRIM COVER
5. REMOVE UPPER TOOL BOX PANEL SUB-ASSEMBLY
6. REMOVE TOOL CASE
7. REMOVE BACK DOOR INSIDE HANDLE BEZEL (for Face to Face Seat Type)
8. REMOVE BACK DOOR TRIM PANEL ASSEMBLY
9. REMOVE BACK DOOR INSIDE HANDLE SUB-ASSEMBLY (for Face to Face Seat Type)
10. REMOVE SPARE WHEEL COVER PAD
11. REMOVE SPARE WHEEL COVER
12. REMOVE SPARE TIRE
13. REMOVE NO. 2 SPARE WHEEL COVER
14. REMOVE REAR SPOILER COVER RH
15. REMOVE REAR SPOILER SUB-ASSEMBLY
16. REMOVE REAR WIPER ARM
17. REMOVE REAR WIPER MOTOR ASSEMBLY
18. REMOVE NO. 1 BACK WINDOW WIPER MOTOR BRACKET
19. REMOVE BACK WINDOW OUTSIDE MOULDING
20. REMOVE BACK DOOR GLASS
21. REMOVE BACK WINDOW GLASS CLIP LH
22. REMOVE BACK WINDOW GLASS CLIP RH
23. REMOVE BACK DOOR GLASS ADHESIVE DAM


1. REMOVE BACK DOOR CENTER GARNISH

- a. Detach the 4 clips and remove the back door center garnish.

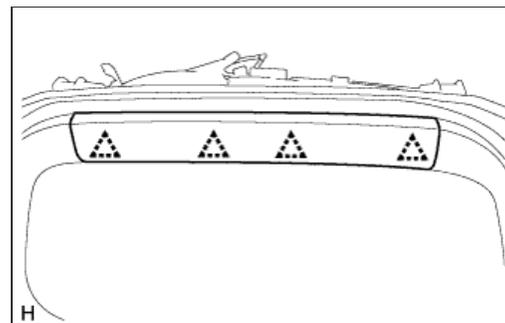


2. REMOVE BACK DOOR SIDE GARNISH LH

- a. Detach the 2 clips and claw and remove the back door side garnish.

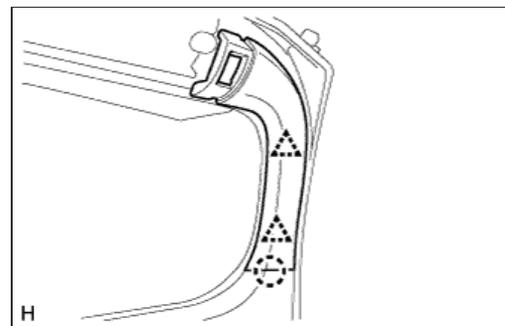

3. REMOVE BACK DOOR SIDE GARNISH RH


- a. Detach the 2 clips and claw and remove the back door side garnish.

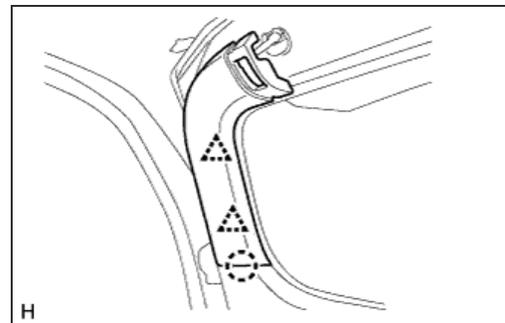

4. REMOVE BACK DOOR TRIM COVER


- a. Remove the back door trim cover as shown in the illustration.

**24. REMOVE BACK WINDOW
UPPER OUTSIDE
MOULDING**

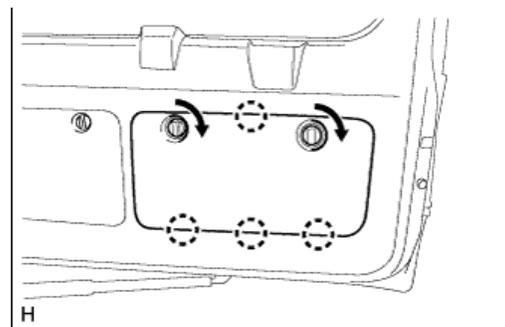


5. REMOVE UPPER TOOL BOX PANEL SUB-ASSEMBLY

- a. Remove the upper tool box panel sub-assembly as shown in the illustration.

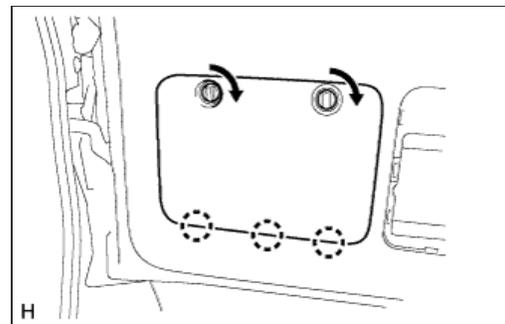


6. REMOVE TOOL CASE

- a. Detach the 2 claws and remove the tool case.

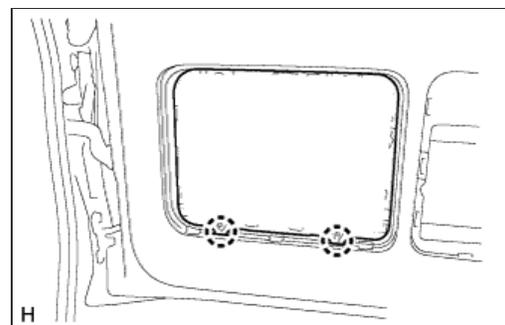

7. REMOVE BACK DOOR INSIDE HANDLE BEZEL (for Face to Face Seat Type)

- a. Remove the screw.
b. Detach the 5 claws and remove the back door inside handle bezel.

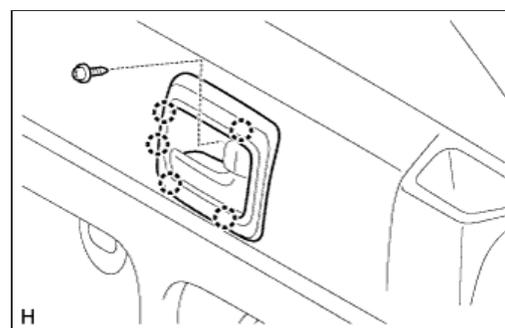


8. REMOVE BACK DOOR TRIM PANEL ASSEMBLY


- a. Detach the claw and remove the cover.

HINT:

Tape the screwdriver tip before use.

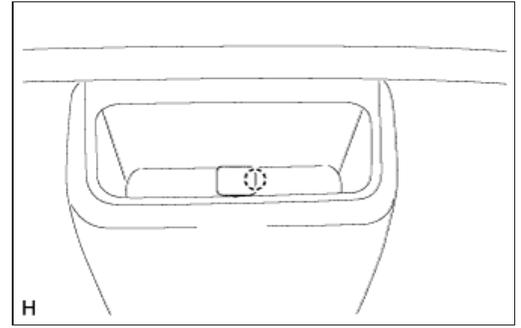


- b. Remove the screw.

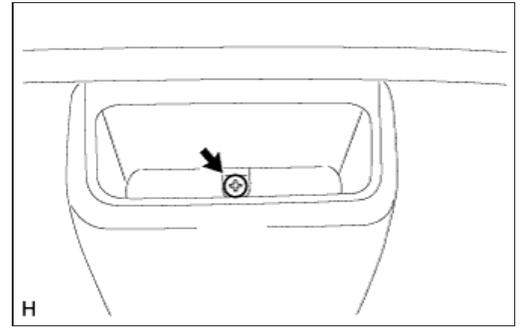


- c. w/o Back Door Tire Carrier:

- i. Remove the bolt.
- ii. Detach the 15 clips and remove the back door trim panel assembly.

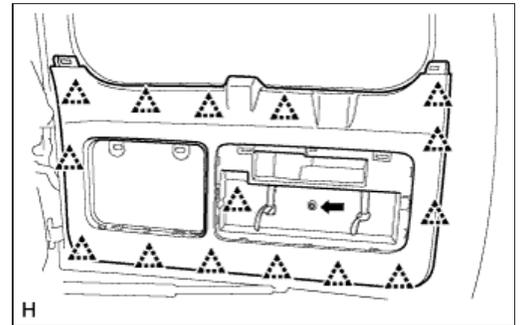


- d. w/ Back Door Tire Carrier:

- i. Remove the bolt.
- ii. Detach the 16 clips and remove the back door trim panel assembly.

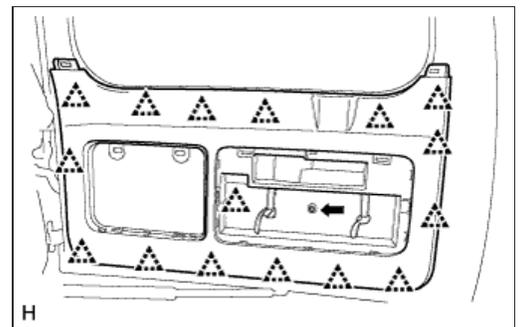


- e. for Face to Face Seat Type:

- i. Remove the screw and bolt.
- ii. Detach the 15 clips and remove the back door trim panel assembly.

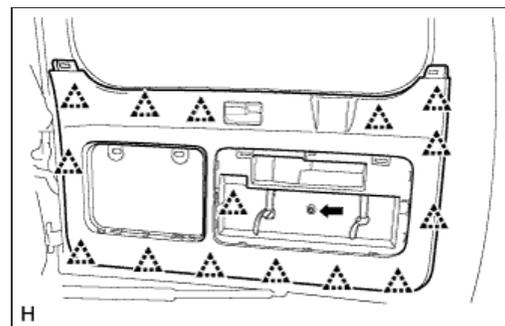


9. REMOVE BACK DOOR INSIDE HANDLE SUB-ASSEMBLY (for Face to Face Seat Type)

- a. Detach the guide.
- b. Detach the claws and remove the inside handle sub-assembly.
- c. Disconnect the 2 cables from the inside handle sub-assembly.

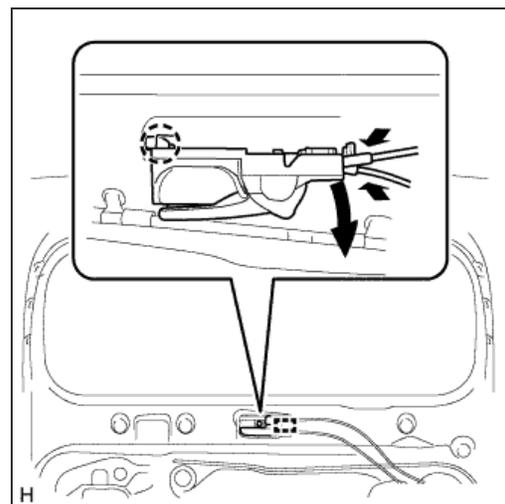


10. REMOVE SPARE WHEEL COVER PAD

- a. Detach the 7 claws and move the wheel cover pad out of the way.

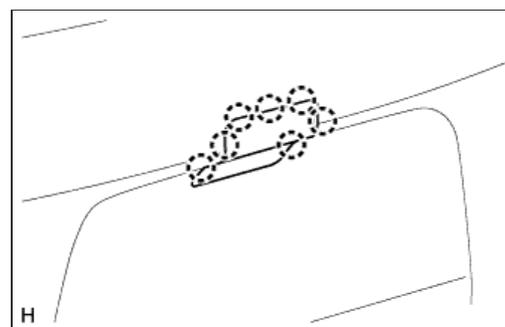


11. REMOVE SPARE WHEEL COVER

- a. Remove the bolt.
- b. Move the lever.

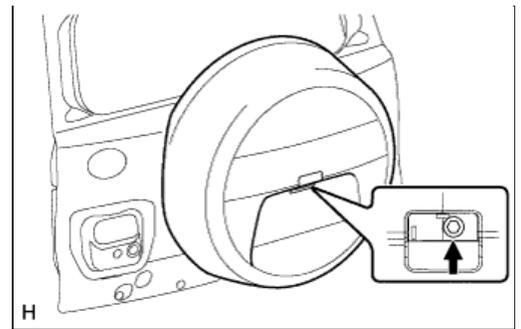


- c. Detach the 8 claws and remove the spare wheel cover.

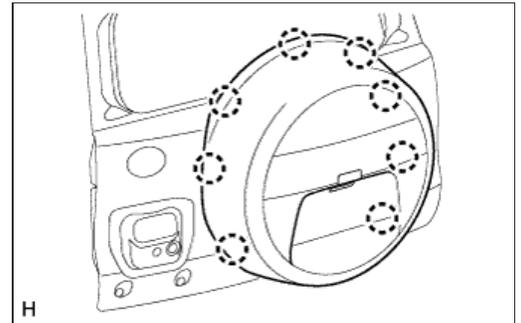

12. REMOVE SPARE TIRE

13. REMOVE NO. 2 SPARE WHEEL COVER

- a. Remove the 4 screws and No. 2 spare wheel cover.

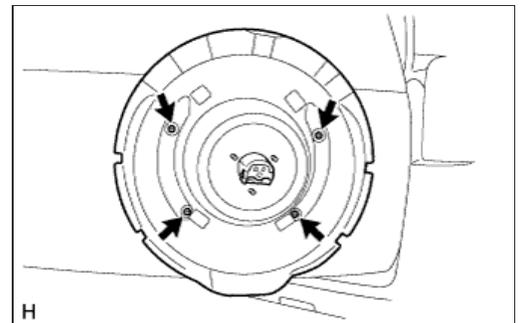


14. REMOVE REAR SPOILER COVER RH

- a. Detach the fastening tape and 5 clips and remove the rear No. 1 spoiler cover.

Text in Illustration

*1	Fastening Tape
----	----------------

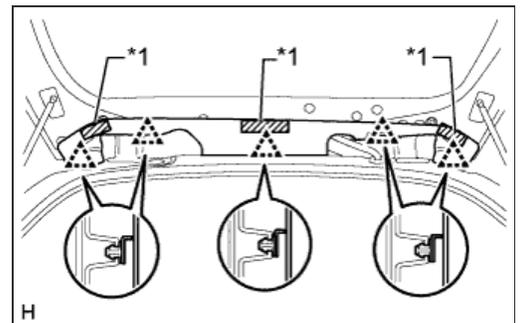


15. REMOVE REAR SPOILER SUB-ASSEMBLY

- a. w/o Back Door Tire Carrier:
Remove the rear spoiler sub-assembly ([Click here](#)).

- b. w/ Back Door Tire Carrier:
Remove the rear spoiler sub-assembly ([Click here](#)).

16. REMOVE REAR WIPER ARM

- a. Remove the nut and rear wiper arm.

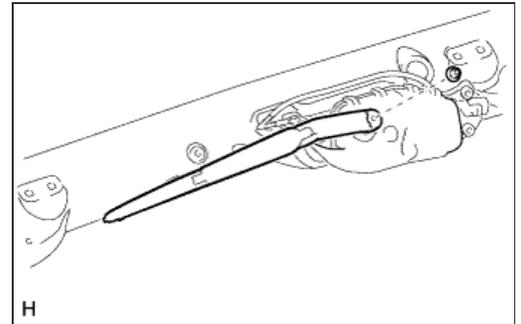


17. REMOVE REAR WIPER MOTOR ASSEMBLY

- a. Disconnect the washer hose and wiper motor connector.

Text in Illustration

*A	w/ Back Door Tire Carrier
*B	w/o Back Door Tire Carrier

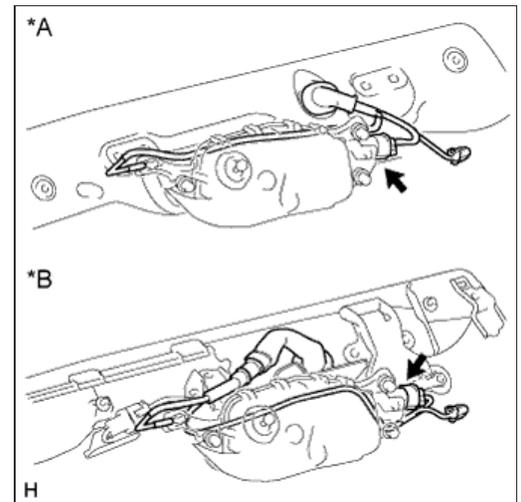


- b. Remove the 3 bolts.

Text in Illustration


*A	w/ Back Door Tire Carrier
*B	w/o Back Door Tire Carrier

- c. Detach the 2 guides and remove the rear wiper motor.

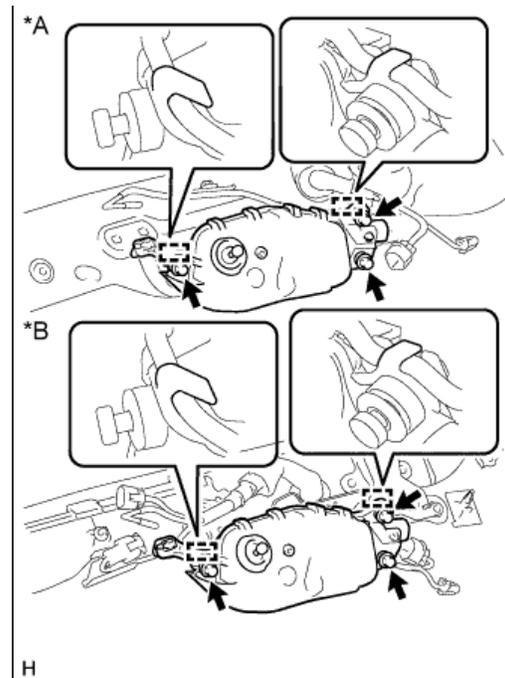

18. REMOVE NO. 1 BACK WINDOW WIPER MOTOR BRACKET

- a. Using a clip remover, detach the clamp.
- b. Remove the 3 bolts.
- c. Using a clip remover, detach the 2 clips and remove the No. 1 back window wiper motor bracket.

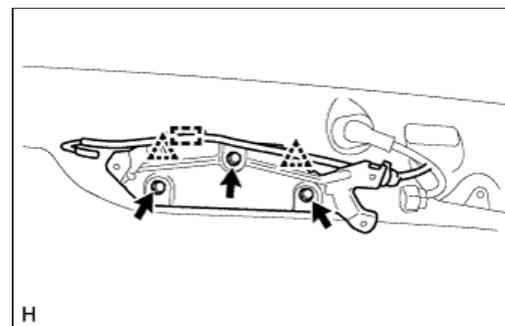


19. REMOVE BACK WINDOW OUTSIDE MOULDING

- a. Using a knife, cut off the 2 outside mouldings as shown in the illustration.

NOTICE:

- Do not damage the vehicle body with the knife.
- If the vehicle body is damaged, repair the damaged portion by applying an anti-rust coating after removing the back window glass assembly.

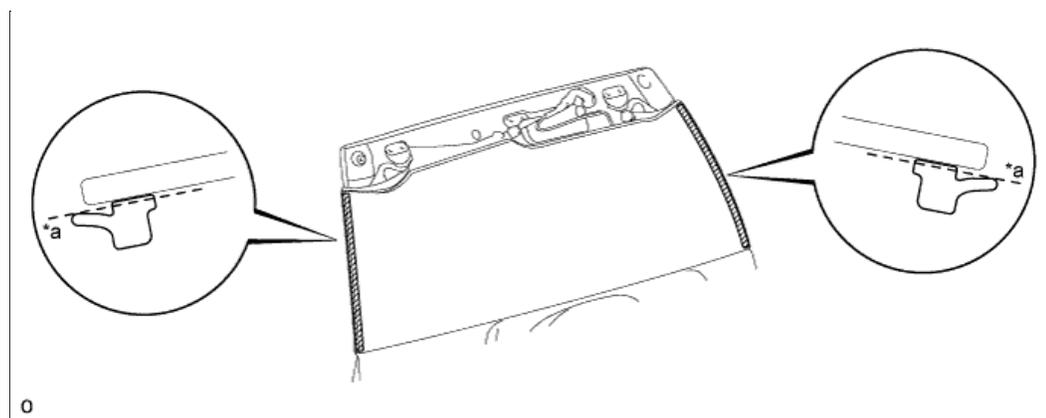

Text in Illustration

*1	Cut	-	-
----	-----	---	---

- b. Remove the remaining outside moulding from the back door glass.

20. REMOVE BACK DOOR GLASS

- a. Apply protective tape to the outer surface of the vehicle body to prevent scratches.


NOTICE:

When separating the back window glass from the vehicle, be careful not to damage the vehicle paint or interior/exterior ornaments.

Text in Illustration

*1	Protective Tape
----	-----------------

- b. Disconnect the connectors.

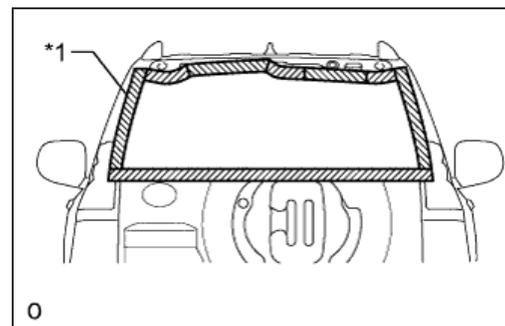


- c. From the interior, insert a piano wire between the vehicle body and glass as shown in the illustration.

Text in Illustration

*1	Clip
*2	Adhesive Dam

- d. Tie objects that can serve as handles (for example, wooden blocks) to both wire ends.
- e. Cut off the adhesive by pulling the piano wire around the back window glass.

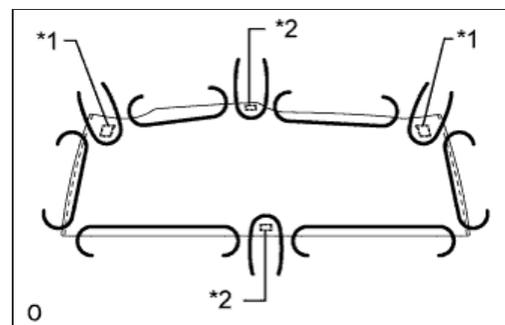**NOTICE:**

- When separating the glass from the vehicle, be careful not to damage the vehicle paint or interior/exterior ornaments.
- Leave as much adhesive on the vehicle body as possible when removing the back window glass.

- f. Place matchmarks over the glass and vehicle body at the locations indicated in the illustration.


HINT:

Matchmarks do not need to be placed if the glass is not going to be reused.

Text in Illustration

--	--	--	--


*a	Matchmark
----	-----------

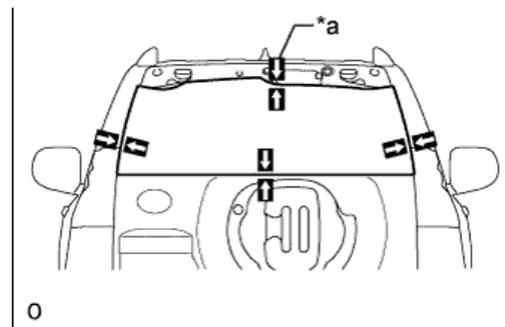

- g. Using suction cups, remove the back door glass.

NOTICE:

Be careful not to drop the back door glass.

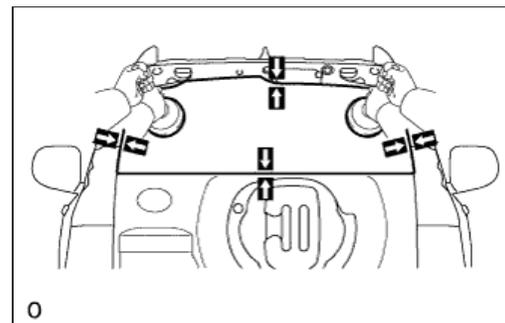


21. REMOVE BACK WINDOW GLASS CLIP LH

- a. Using a scraper, remove the clip.

NOTICE:

- Be careful not to damage the back door glass.
- Be sure to replace the clip with new one.

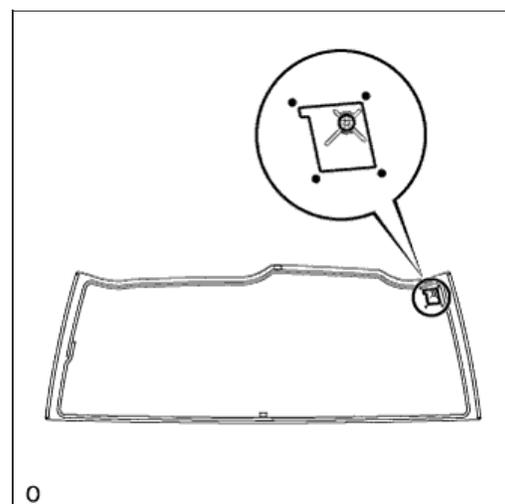


22. REMOVE BACK WINDOW GLASS CLIP RH

- a. Using a scraper, remove the clip.

NOTICE:

- Be careful not to damage the back door glass.
- Be sure to replace the clip with new one.

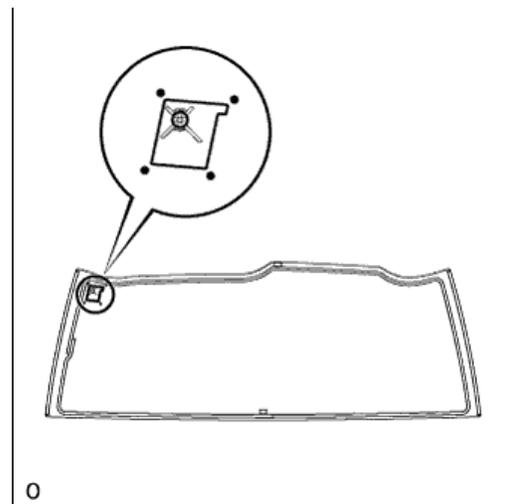


23. REMOVE BACK DOOR GLASS ADHESIVE DAM

- a. Using a scraper, remove the 2 dams.

NOTICE:

- Be careful not to damage the back door glass.
- Be sure to replace the 2 dams with new ones.

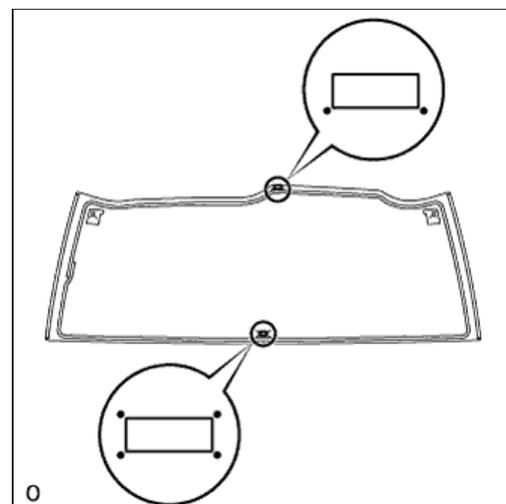

24. REMOVE BACK WINDOW UPPER OUTSIDE MOULDING

- a. Using a scraper, remove the outside moulding LH and RH.

NOTICE:

- Be careful not to damage the back door glass.
- Be sure to replace the mouldings with new ones.

Text in Illustration

*1	Back Window Upper Outside Moulding LH
*2	Back Window Upper Outside Moulding RH

